

FEUERHAND PYRON PLATE

EN User Manual

FEUERHAND | MANUFACTURER SINCE 1893

USER MANUAL

Thank you for purchasing the Feuerhand Pyron Plate. The brand Feuerhand looks back upon a tradition of more than one hundred years.

IMPORTANT INSTRUCTIONS

Please read this user manual carefully before using the product for the first time. Follow the safety instructions and keep this user manual. If the product is used by other people, they must also be given this user manual.

Where to use the Pyron Plate: The Pyron Plate is designed and built for use outdoors on the Feuerhand Pyron only. It can be used only if the following safety instructions, warnings, and instructions for use are followed. Please note that, due to the material, the Pyron Plate may develop rust.

! SAFETY INSTRUCTIONS


Only use the Pyron Plate on the Feuerhand Pyron outdoors. It must never be used in closed rooms, as there is a fire hazard and danger of asphyxiation.

- Refer to and comply with the applicable fire safety regulations. Show consideration to the plant and animal life when using the product outdoors.
- Caution! The Pyron fire barrel, Plate, and all of its parts can become extremely hot while used. Always wear fireproof gloves when adding more firewood and do not move the plate.
- Never leave the fire barrel burn unattended. Keep out of reach of children and animals.
- Keep a safe distance to flammable and heatsensitive objects and materials. We recommend that you place the fire barrel in a clear area within a radius of 5 feet.
- Place the fire barrel on an even, heat-resistant surface and ensure it's steady, before placing the Pyron Plate on top.
- Do not cover the Pyron Plate while it is in use. Fire hazard!
- Never use liquid fire starters or fluids such as kerosene, turpentine, or denatured alcohol to start or restart the fire. Such substances can explode and are toxic and harmful to the environment. We recommend commercially available solid grill or fire lighters. Please follow the instructions on the packaging.
- Do not move the Pyron or Pyron Plate when a fire is burning inside.
- Wear appropriate clothes when using the Pyron and Pyron Plate. Long, loose sleeves can easily catch fire!
- Be careful when adding fuel. Only add one piece at a time and carefully through the opening of the cooking support. Protect your hands with heat-resistant gloves.
- Have a bucket of sand or a powder fire extinguisher nearby in case of emergency.
- For the fire to stop burning, let the fuel burn down entirely, and let the fire barrel and plate cool down completely after use.
- Maintain the Pyron Plate as specified in the instructions for care.

- Never throw hot ashes into the household trash!
- Also read and understand the Pyron User Manual.
- The warranty does not cover improper use or misuse of the Pyron Plate. Such use invalidates the warranty.

PRODUCT DESCRIPTION

The Pyron Plate is an addition to your Pyron for great cooking experiences on the fire barrel. Thanks to the clean combustion of the Pyron, you can cook smoke-free on the "plancha." The cooking support allows you to use the heat for pots, pans, and kettles. The patina developing on the plate gives your dishes a unique flavor "a la plancha."

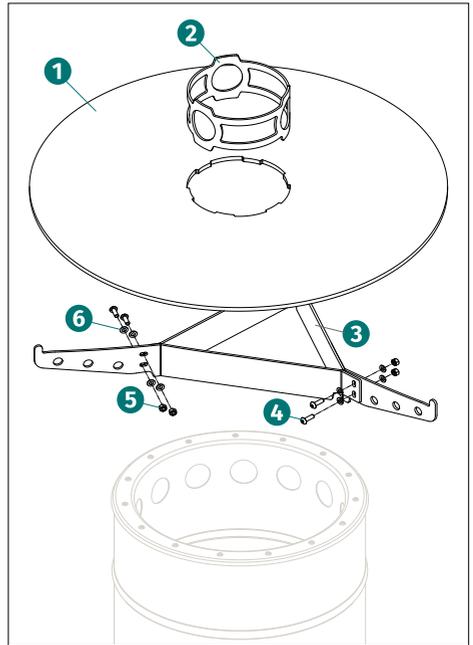

SCOPE OF DELIVERY

1. Pyron Plate grilling plate
2. Cooking support
3. 3 x Arms of support frame with plate hooks
4. 6 x Allen screws
5. 6 x Nuts for Allen screws
6. 12 x Washers
7. User Manual (EN) (no Fig.)


TECHNICAL DETAILS

- Diameter Pyron Plate (overall): 22.4 in
- Diameter fuel opening: 5.1 in
- Outer diameter cooking support: 5.5 in
- Overall dimensions assembled Pyron Plate (H x W x D): 5.1 x 23.6 x 23.6 in
- Thickness Pyron Plate: 0.24 in
- Overall height: 5.1 in
- Overall weight: 29.8 lbs

ASSEMBLY AND USE

STEP 1:

Arrange the three arms of the support frame on an even surface (table) and fix them with the provided screws, the washers placed under the screw heads and nuts. Make sure that all plate hooks are facing in an upward direction.

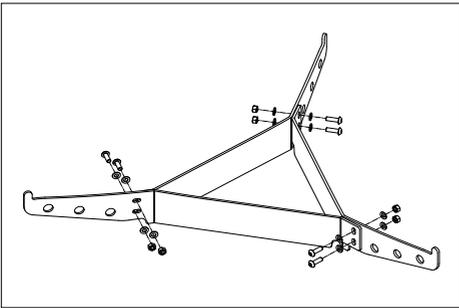

STEP 2:

Ensure the Pyron has a steady stand before placing the support frame on top. It should be positioned on even, solid ground. Place the fixed support frame, with the grooves pointing upwards, completely into the upper part of the Pyron. Minimize possible clearance between the frame and Pyron by carefully adjusting each arm and tighten the screws.

STEP 3:

Place the Pyron Plate on the support frame and insert the cooking support into the respective opening of the Pyron.

COMMISSIONING

During its first use, the plate will arch. Due to the material, it cannot be predicted if the arching will take place up or downwards. If the plate is arched upwards please remove the cooking support using fireproof gloves and place it on a heat-resistant surface. Turn the plate over so that it is arched downwards and carefully reinsert the cooking support.

SEASONING

Before using the Pyron Plate for the first time, you have to season the plate to develop a patina. Pour some high temperature oil onto the plate until it is completely covered. To prevent the oil from dripping off the plate, you can add some salt. Heat up the Pyron Plate and cover the surface with raw potato slices (with or without peel). Let the potatoes roast at high heat until they are dark brown, turning them over several times. After some time, the steel will get darker and develop the typical patina. Remove the oil, potatoes, and salt with a scraper. Let the grilling plate cool down and clean it with hot, clear water. Afterwards, the plate can be lubricated for maintenance. The plate is now ready to use.

USE

When using the Pyron with the Pyron Plate, the fire may stop burning for a short moment with increasing smoke development. This is due to the Pyron being filled too high or the ventilation being too low. To reignite the gasified wood, put in small, dry timber or use a match to ignite the smoke. The smoke development will stop immediately.

CLEANING, MAINTENANCE, AND STORAGE

Before storing the Pyron Plate after use, let the fire in the Pyron burn down completely, without adding wood. Do not pour water into the fire barrel to extinguish the fire but have a bucket of sand or a powder fire extinguisher nearby in case of emergency. You can remove the plate as soon as it is cooled down and clean it. Please keep in mind that the Pyron Plate with its support frame and the cooking support are made of untreated steel and, thus, will develop rust after time.

CLEANING

Please clean the Pyron Plate after each utilization by using clear water and a sponge or scraper. Please do not use dishwashing liquids to preserve the patina on the plate. Thoroughly dry and lubricate the plate after cleaning.

STORAGE

Do not store the Pyron and Pyron Plate with all its parts unprotected and outdoors. Only store the Pyron Plate when it is completely cool and cleaned. Always store it in a dry place, cover it with a cloth and avoid wetness or condensation. Keep the Pyron Plate and Feuerhand Pyron in a separate place, as the reaction of steel and stainless steel can lead to heavy rust on the Pyron. Clean, maintain, and store the Feuerhand Pyron according to the provided User Manual. Please pay particular attention that you clean the outside of the Pyron carefully after use with the Pyron Plate. Due to the compound of ash particles and air humidity as well as potential steel particles selective rust can accumulate on the outside of the Pyron.

WARRANTY

Under proper use, a warranty period of two years will apply to the Pyron Plate from the date of purchase. Please note that the color changes of the steel and possible rust are not a defect. If you cannot properly use the Pyron Plate due to a defect in material or workmanship, you are entitled to a warranty repair. Contact your retailer for that purpose.

SERVICE

If you have questions or if you need additional information, please let us know. You can contact our support team via e-mail at:

service@feuerhand.com

OTHER PRODUCTS

FEUERHAND **BABY SPECIAL 276**



Zinc-plated



Ruby Red



Moss Green



Pure White



Cobalt Blue



Signal Yellow



Jet Black



Olive



Bronze



Sparkling Iron



Light Green



Telemagenta

FEUERHAND **PYRON**



Operating principle



Feet



Petromax Inc.

2500 Wilcrest
Suite 300
Houston 77042
United States of America

Phone: +18323844074

E-mail: service@feuerhand.com

Web: www.feuerhand.com

© ALL RIGHTS RESERVED

Petromax and the dragon brand are registered trademarks. The content of this catalog must not be replicated in any way, edited, copied, or distributed by any means without permission.

Printed in Germany